


## Quick guide — — Overview buttons and guidance screen

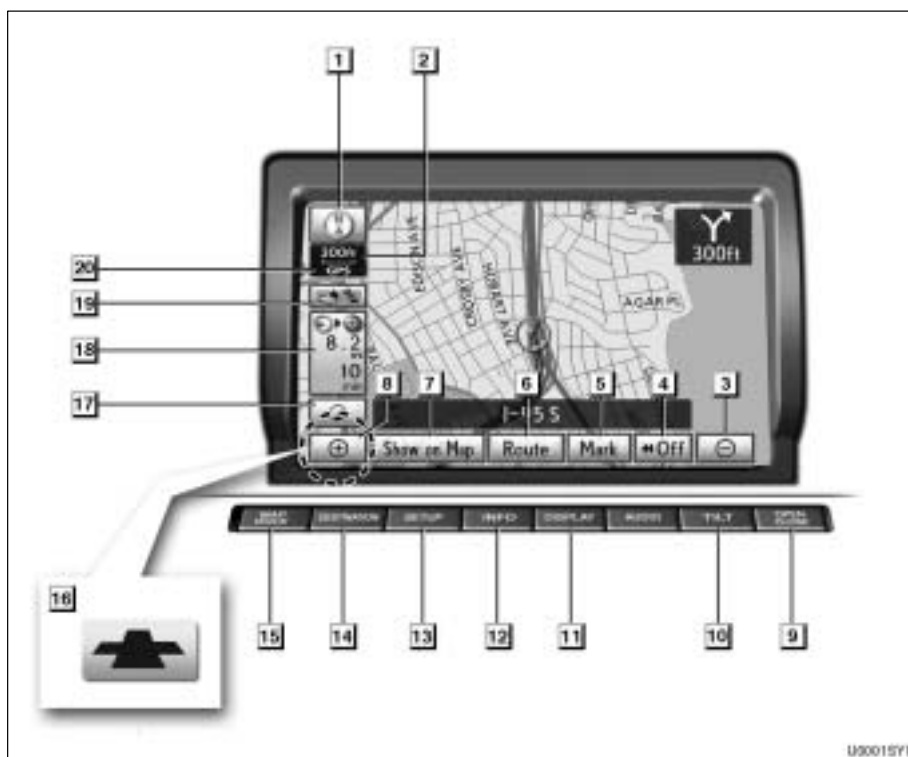

No.	Name	Function	Page
1	<b>North-up or heading-up symbol</b>	This symbol indicates a map view with north-up or heading-up. Touching this symbol changes the map orientation.	44
2	<b>Scale indicator</b>	This figure indicates the map scale.	43
3	<b>Zoom out button</b>	Touch this button to reduce the map scale.	43
4	<b>"◀◀Off"</b>	Touch this button to obtain a broader view. Some of the buttons on the screen are not displayed. They are displayed again by touching <b>"On▶▶"</b> .	252
5	<b>"Mark"</b>	Touch this button to register the current position or the cursor position as an address book entry.	36
6	<b>"Route"</b>	Touch this button to change the route.	94, 96

No.	Name	Function	Page
<b>7</b>	<b>“Show on Map”</b>	Touch this button to browse information about guidance route, to set the Points of Interest to be displayed on the screen, or to record the route.	102, 108
<b>8</b>	<b>Zoom in button</b>	Touch this button to magnify the map scale.	43
<b>9</b>	<b>“OPEN/CLOSE” button</b>	Push this button to open or close the screen cover.	27
<b>10</b>	<b>“TILT” button</b>	Push this button to tilt the display.	27
<b>11</b>	<b>“DISPLAY” button</b>	Push this button to display the “Display” (quality control) screen.	32
<b>12</b>	<b>“INFO” button</b>	Push this button to display the “Information” screen.	23, 136, 151, 153, 319
<b>13</b>	<b>“SET UP” button</b>	Push this button to display the “Setup” screen.	22, 112, 238, 242, 244, 247, 256, 294, 302
<b>14</b>	<b>“DESTINATION” button</b>	Push this button to display the “Destination” screen.	7, 9, 11, 12, 13, 62
<b>15</b>	<b>“MAP/VOICE” button</b>	Push this button to repeat a guidance voice, cancel the map scroll, start guidance and display the current position.	34
<b>16</b>	<b>Foot print map button</b>	Touch this button to display the foot print map and the building information.	43
<b>17</b>	<b>Screen configuration button</b>	Touch this button to change the screen mode.	40
<b>18</b>	<b>Distance and time to destination</b>	Displays the distance, the estimated travel time to the destination, and the estimated arrival time at the destination.	93
<b>19</b>	<b>XM® indicator</b>	This mark is displayed when XM® information is received.	108
<b>20</b>	<b>“GPS” mark (Global Positioning System)</b>	Whenever the vehicle is receiving signals from the GPS, this mark is displayed.	308

## — Registering home



- 1 Push the “DESTINATION” button.



- 2 Touch “Go Home”.

If home has not been registered, you can register it by touching “Go Home”.



- 3 Touch “Yes”.




- 4 There are 4 different methods to search your home.

See “Destination search” on page 62.



##### 5 Touch "Enter".

The "Edit Home" screen is displayed.

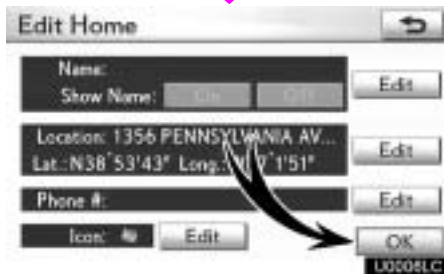

##### 6 Touch "OK".

Registration of home is complete.

You can also register home by pushing the "SET UP" button. (See " (a) Registering home" on page 113.)

You can change the name, location, phone number and icon. (See " (b) Editing home" on page 114.)

## — Registering preset destinations



- 1 Push the “DESTINATION” button.



- 2 Touch one of the preset destination buttons.

You can set a preset destination to any preset destination button that has not yet been set.



- 3 Touch “Yes”.



- 4 There are 4 different methods to search preset destinations.

See “Destination search” on page 62.



##### 5 Touch "Enter".

The "Edit Preset Destination" screen is displayed.



##### 6 Touch "OK".

Registration of preset destinations is complete.

You can also register preset destinations by pushing the "**SET UP**" button. (See " (a) Registering preset destinations" on page 116.)

You can change the name, location, phone number and icon. (See " (b) Editing preset destinations" on page 117.)

The registered points can be used on the "Destination" screen. (See " — Destination search by Preset destinations" on page 64.)

## — Operation flow: guiding the route



- 1 Push the “DESTINATION” button.




- 2 There are 10 different methods to search destinations.

See “Destination search” on page 62.



- 3 Touch “Go to”.

The navigation system performs a search for the route.

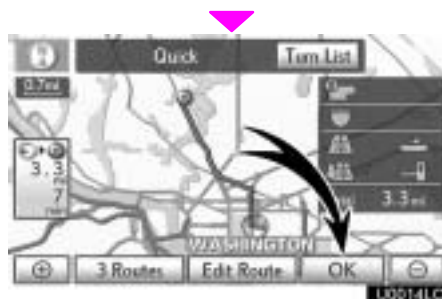

- 4 Touch “OK”, and start driving.

Routes other than the one recommended can also be selected. (See “Starting route guidance” on page 82.)

- 5 Guidance to the destination is given via voice and on the guidance screen.

## — Setting home as the destination



- 1 Push the “DESTINATION” button.




- 2 Touch “Go Home”.

“Go Home” can be used if your home has been registered. (To register “Home”, see “(a) Registering home” on page 113.)



- 3 Touch “Go to”.

The navigation system performs a search for the route.

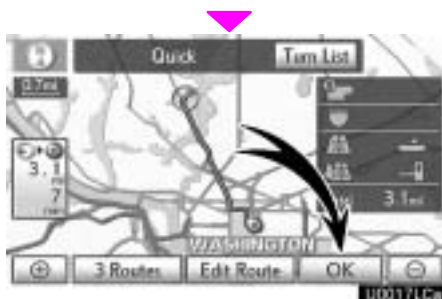

- 4 Touch “OK”, and start driving.

Routes other than the one recommended can also be selected. (See “Starting route guidance” on page 82.)

- 5 Guidance to the destination is given via voice and on the guidance screen.